
Use one AMA1080p MASTER in a sync system

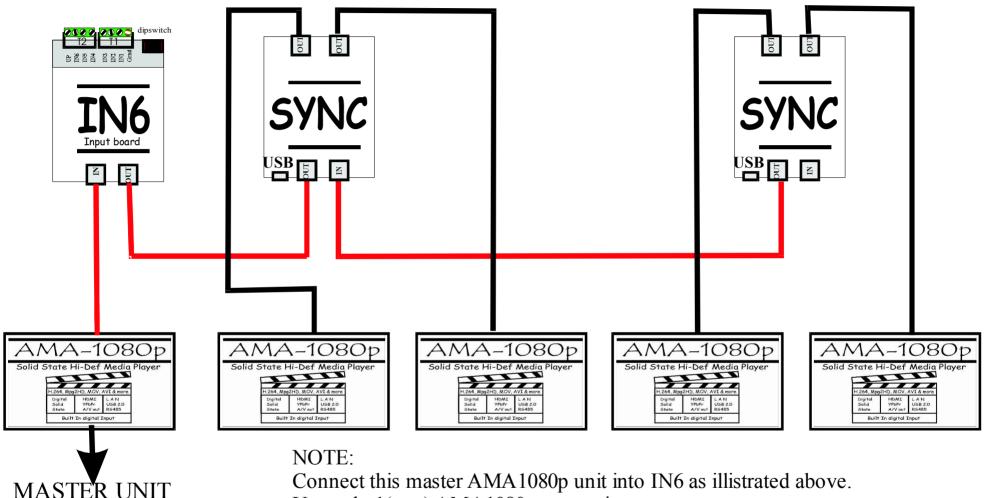

Connect this master AMA 1080p unit into IN6 as illistrated above.

Use only 1(one) AMA1080p master in a sync system.

Other units in the sync are standard AMA 1080p's.

In autoplay.txt of the master unit only, add this line:

synctime=xxxx, where xxxx is the sync time in 0.1 sec increment.

Example: If sync time is 90 seconds add this line: synctime=900